



## GATE ALARM EXAMPLE





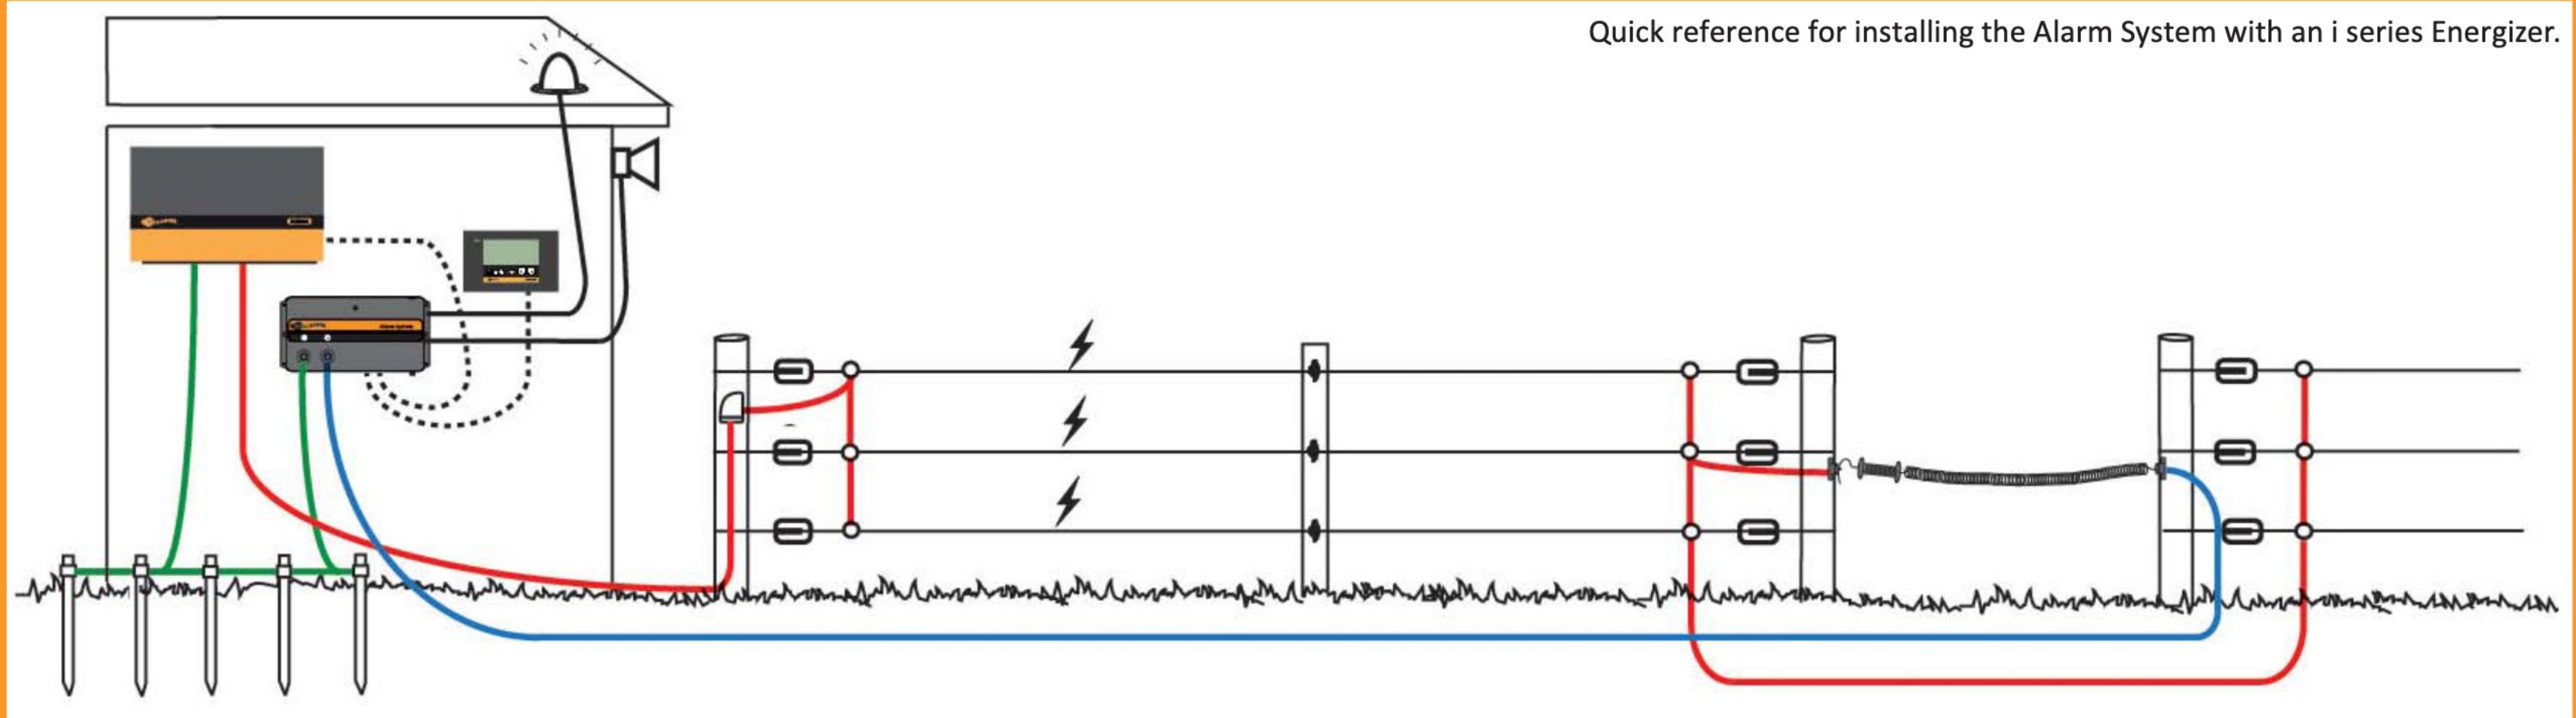

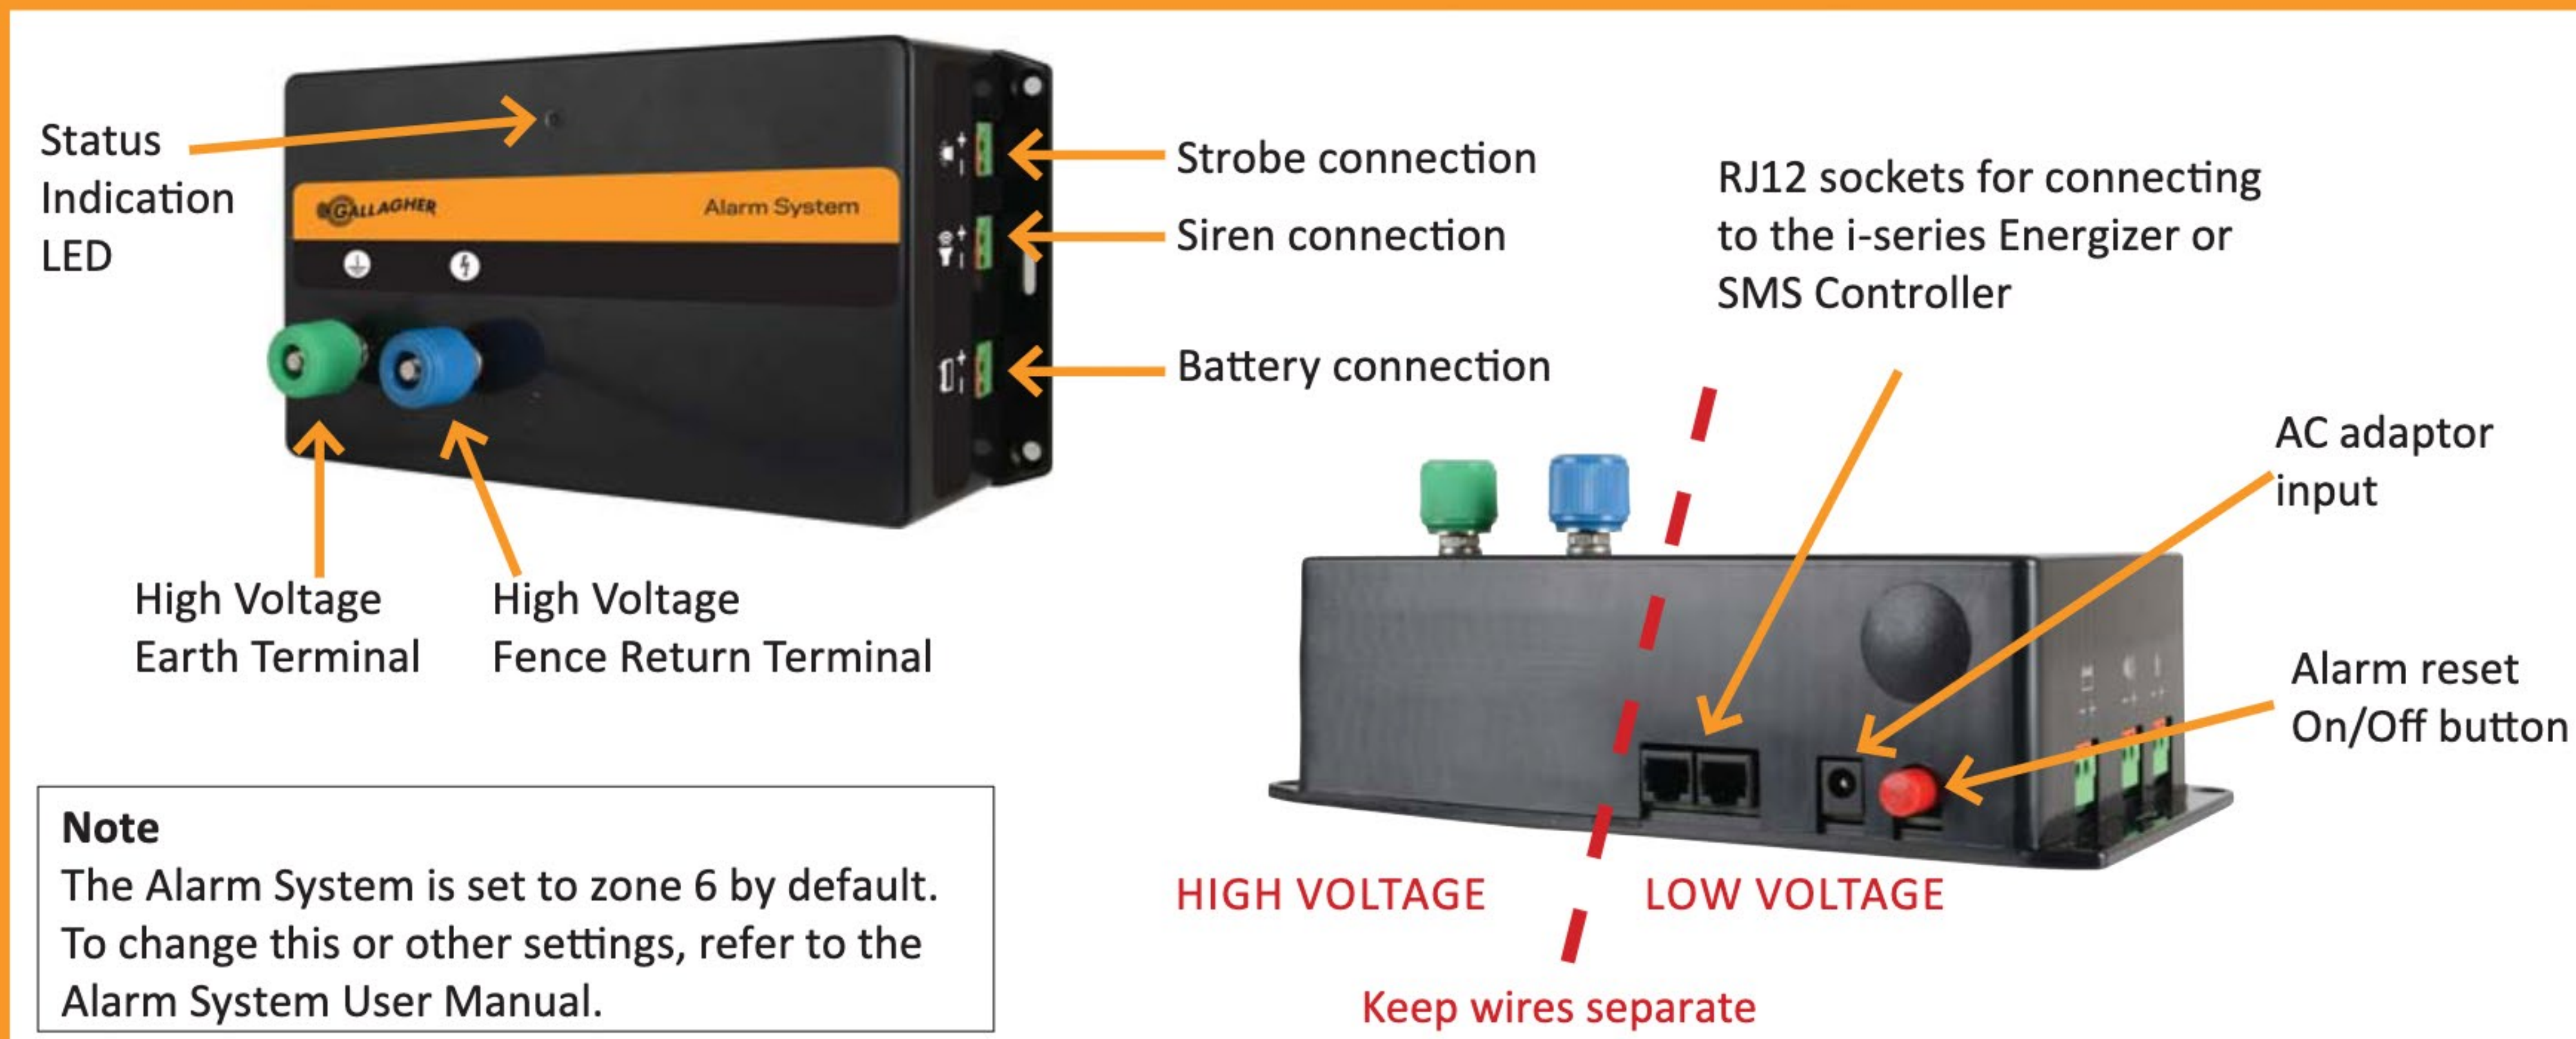

## ALARM SYSTEM



## ADJUSTING ALARM LEVEL



1. Select zone 6 using arrow   buttons.
2. Press settings  button.
3. Choose alarm alert voltage using   buttons.
4. Press settings  button to confirm.